

Easy**Net**<sup>™</sup> Series **NVR** 

# **QUICK SETUP GUIDE – OVERVIEW**

This manual is intended for initial setup only. The user should read the entire instructions manual before using this product. The user instructions manual can be downloaded via NUVICO website. <a href="https://www.nuvico.com">www.nuvico.com</a>


#### **TABLE OF CONTENTS**

QUICK SETUP GUIDE - OVERVIEW	
TABLE OF CONTENTS	1
INSTALLATION DIAGRAM	2
EN-P800 SAMPLE INSTALLATION DIAGRAM	2
GETTING STARTED	3
HOW TO START THE NVR	3
HOW TO LOG IN TO THE NVR	3
MONITOR SETUP	6
CONFIGURE NVR'S MONITOR OUTPUT TO 1920 x 1080	6
IF YOU ARE USING A BNC MONITOR	8
HOW TO DISABLE MAIN 2 BNC OUTPUT	9
HOW TO SET DATE/TIME	12
CAMERA SETUP	14
RECORD SETUP	
NETWORK SETUP	21
VIDEO SEARCH & PLAYBACK	25
HOW TO COPY VIDEOS INTO CD/DVD/USB	30
HOW TO VIEW COPIED VIDEO	32



### INSTALLATION DIAGRAM

#### **EN-P800 SAMPLE INSTALLATION DIAGRAM**

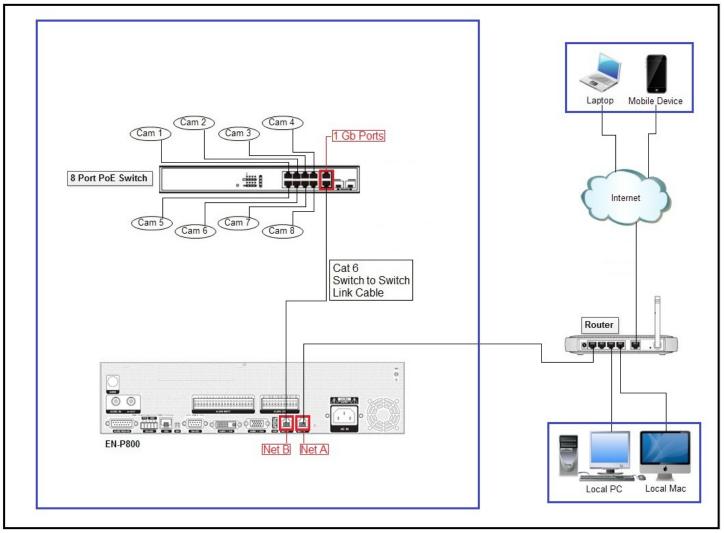

- 1. The Make and Model of the PoE Network Switch illustrated in the diagram is:
  - a. 8 Port: Make: ifs Model: GE-DS-82-POE
- 2. This network switch have dedicated 2 extra 1 Gbps port that are used for 2 purposes.
  - To link up to the EN-P800 Net B network port that is configured for private camera network to guarantee the reliability and the performance.
  - In certain instances, you might have to link the 2 network switches together using faster 1 Gbps port instead of standard 100Mbps PoE ports.

Important Note: Make sure that the Net B is connected to the dedicated 1 Gbps on the switch and Net A is connected to the standard internet router.

#### **GETTING STARTED**

**IMPORTANT NOTE**: Prior to staring the NVR, make sure that the PoE Network Switches are powered on, initialized, and are providing power to the EasyNet HD Cameras.


#### **HOW TO START THE NVR**

- 1. Connect the supplied USB mouse into any available USB port on the front NVR panel.
- 2. Connect the power cable from the power source outlet (preferably a UPS) to the back of the NVR.

Turn on and start the NVR.

- Using Front Panel/Remote: Press the **POWER** button for 3 seconds.
- Using Mouse: Not supported



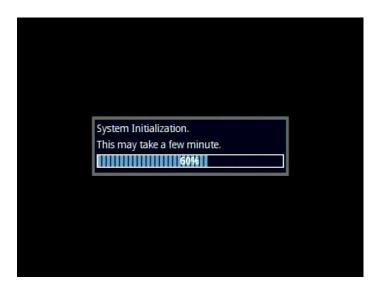

#### HOW TO LOG IN TO THE NVR

By default, when you turn on the NVR, the NVR automatically starts with "admin" account logged in. This makes it convenient to the user so that they can start using the NVR immediately.


However, on instances where user logs out of the NVR, or when LOCK button is pressed, user would manually need to log in to the NVR. The instructions below illustrate how this can be achieved.

## **GETTING STARTED**

- 1. Follow the instructions below.
  - Using Mouse: Click on the [Log In] icon.



- 2. You need to input admin password, which is [0 0 0 0 0 0].
  - Using Mouse: Click on the [Keyboard] icon.

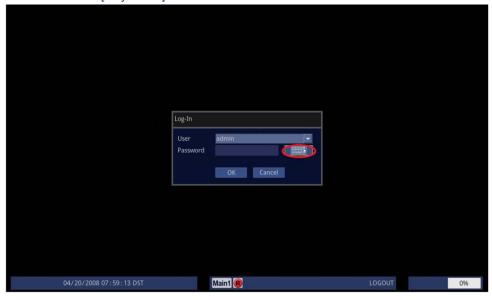


# **GETTING STARTED**


3. On screen keyboard should now appear. The default admin password for the NVR is [0 0 0 0 0 0].

• Using Mouse: Highlight [0] and click six times, then, highlight [₄] and click.



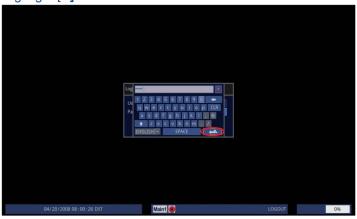


- 4. Lastly, when you select [OK] you are now logged on as admin.
  - Using Mouse: Highlight [OK] and click.

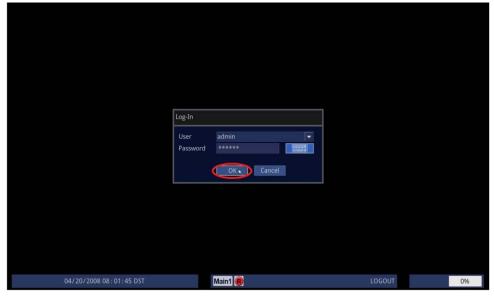


#### **CONFIGURE NVR'S MONITOR OUTPUT TO 1920 x 1080**

To take full advantage of the EasyNet NVR, you want to make sure that you have a 1080p capable monitor. Follow the instructions below.


- 1. Follow the instructions below.
  - Using Mouse: Click on the [Setup Menu] icon.

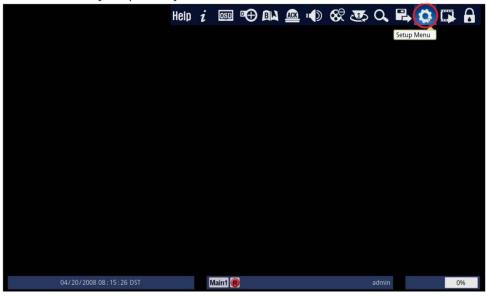


- 2. Select Advanced Setup.
  - Using Mouse: Click on the [Advanced Setup].

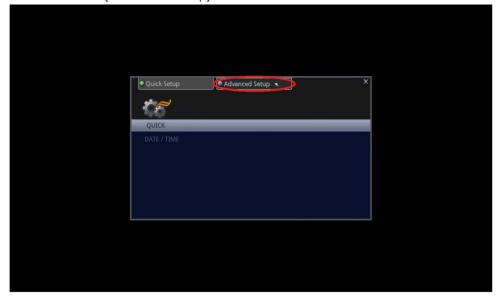


- 3. Select [MONITOR] under DISPLAY option.
  - Using Mouse: Click on the [DISPLAY], then, click on [MONITOR].

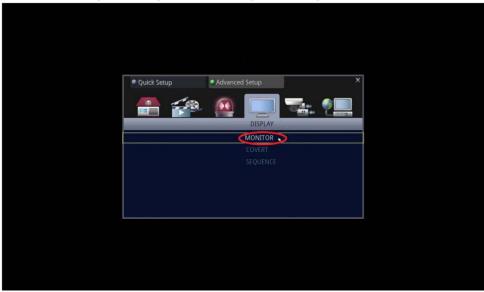

- 4. Select 1920 x 1080 which is true 1080p resolution.
  - Using Mouse: Select and click on the 1920 x 1080.

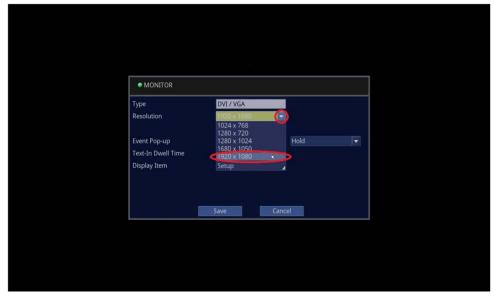

- 5. Save the changes.
  - Using Mouse: Click on [Save] to save.

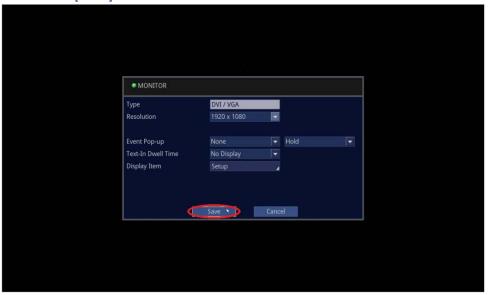


- 6. To exit out to the Live screen.
  - Using Mouse: Right click on your mouse twice.

#### IF YOU ARE USING A BNC MONITOR

IMPORTANT NOTE: If you are ONLY using a BNC type monitor, which is [Main 2] output,

• Using Mouse: On the Main 1, move the mouse cursor towards the right side of the screen and keep moving right until mouse cursor appears on Main 2.



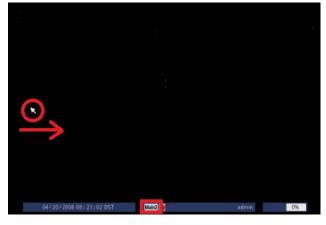


#### **HOW TO DISABLE MAIN 2 BNC OUTPUT**


**IMPORTANT NOTE**: This step is extremely important if you use only 1 monitor such which is connected either HDMI/DVI or VGA.

The factory default setting for 2<sup>nd</sup> Monitor is turned "On". However, should you **NOT** want to take advantage of the 2<sup>nd</sup> Monitor "Main 2", follow these instructions.


- 1. Follow the instructions below.
  - Using Mouse: Click on the [Setup Menu] icon.

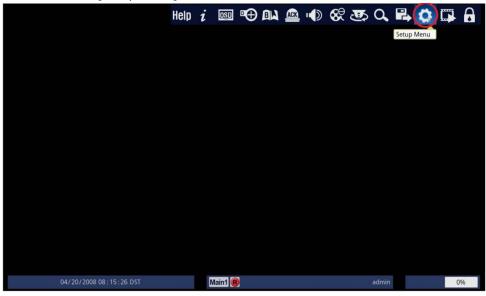


- 2. Select Advanced Setup.
  - Using Mouse: Click on the [Advanced Setup].

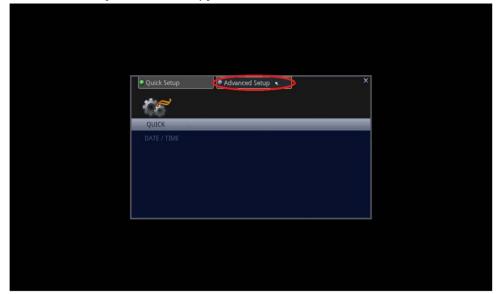

- 3. Access the sub-menu of SYSTEM.
  - Using Mouse: Click on the [SYSTEM].

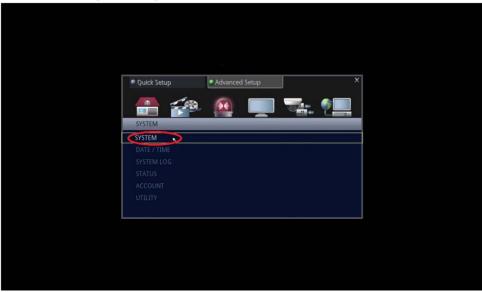

- 4. Uncheck to turn off [Monitor Key], and define which monitor you would solely like to use. Since HDMI/VGA is Main 1, you want to make sure that Main 1 is displayed next to the [Use] checkbox.
  - Using Mouse: Click on the [Monitor Key] to uncheck the selection and define the primary monitor

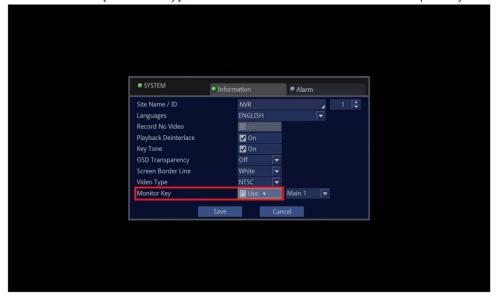

#### 5. Save the changes.

• Using Mouse: Click on [Save] to save.




- 6. To exit out to the Live screen.
  - Using Mouse: Right click on your mouse twice.

### **HOW TO SET DATE/TIME**

When the NVR is powered on for the very first time, the time and date may be incorrect. Before any other operation of the NVR is started, it is important to setup the time and the date.

- 1. Follow the instructions below.
  - Using Mouse: Click on the [Setup Menu] icon.

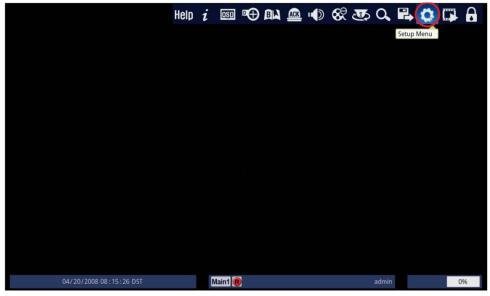


- 2. Access DATE / TIME submenu.
  - Using Mouse: Click on the [DATE/TIME] line under the Quick Setup Tab.



### **HOW TO SET DATE/TIME**

#### 3. Change to the desired value.

• Using Mouse: Click on the desired value and modify.

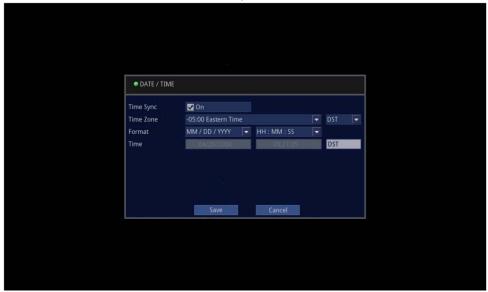

Time Sync: When checked, it will synchronize the NVR's time to its regional NTP (Network Time Server) if an active

internet connection is maintained.


**Time Zone**: Select appropriate Time Zone for your location.

**Format**: Allows the format and display of DATE/ Time to be customized.

**Time**: Set or modify the Date and Time.

#### 4. Save the changes.


• Using Mouse: Click on [Save] to save.

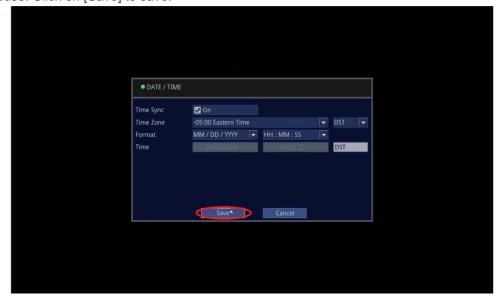


- 5. To exit out to the Live screen.
  - Using Mouse: Right click on your mouse twice.

## **CAMERA SETUP**

- 1. Follow the instructions below.
  - Using Mouse: Click on the [Setup Menu] icon.

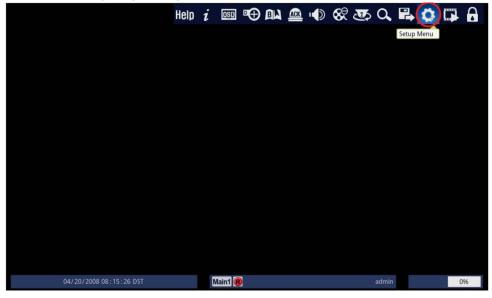


- 2. Select Advanced Setup.
  - Using Mouse: Click on the [Advanced Setup].

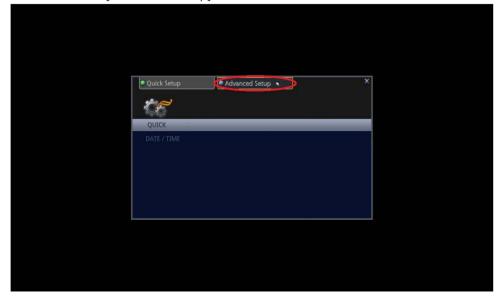

### **CAMERA SETUP**

- 3. Select Devices.
  - Using Mouse: Click on the [CAMERA MANAGER].

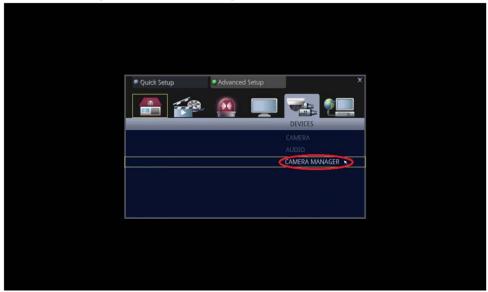

4. NVR will automatically discover EasyNet cameras and will display them on this screen. There are no specific orders since the NVR is broadcasting to the network switch for any available EasyNet cameras.



**NOTE:** If you do not see all of your cameras being displayed on this screen, try one of the following.

- 1. Make sure that all of your cameras are connected to the PoE switch.
- 2. Try pressing on the Refresh button and NVR will try to re-discover the EasyNet cameras.

### **CAMERA SETUP**

- 5. Now, since there were no specific orders of the cameras, you would want to start assigning the channel number to the cameras so that the cameras can be identified with specific channel ID going forward.
  - Using Mouse: Click on the channel drop down menu, and choose from 1 through 8.



**Tip:** It is possible that the Camera Manager Window can block some of the cameras. In this instance, you can simply place the mouse cursor on the top of the Camera Manager window and drag them to the different parts of the screen to expose the hidden cameras.







6. If all of your camera's Channel ID is set, click on "Save" to exit out of this menu.




- 1. Follow the instructions below.
  - Using Mouse: Click on the [Setup Menu] icon.

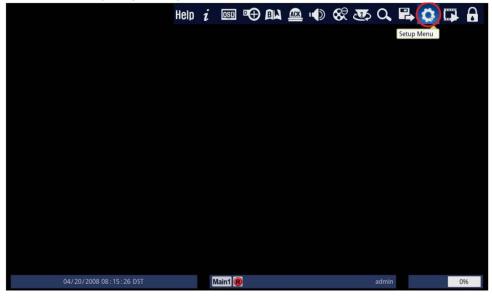

- 2. Click on the [Advanced Setup]
  - Using Mouse: Click on the [Advanced Setup].

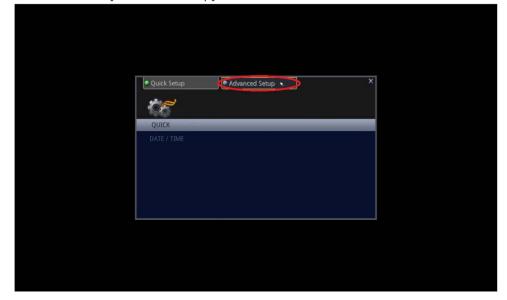

- 3. Click on the [RECORD]
  - Using Mouse: Click on the [RECORD].

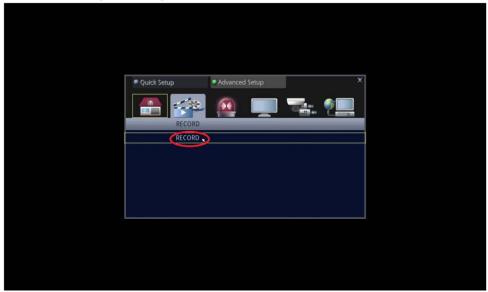

- 4. For CONTINUOUS Record, change to the desired value. CONTINUOUS Record means that the cameras are recording 24/7.
  - Using Mouse: Click on the desired value and modify. When finished, click on [Save] to exit out of the menu.



**CONTINUOUS**: On or Off. Refers to Continuous (24/7) recording for all cameras.

RES: Set the resolution of the recorded videos. There are 2 choices. 4CIF & 2MP. 4CIF refers to 704

x 480 resolution and 2MP is full 1080P resolution of 1920 x 1080.

**PPS**: 1, 2, 4, 7, 15. Refers to pictures per second for all cameras. 1 being jerky, and 15 being smooth,

almost a real-time video.

**QLT**: Detail or sharpness of the recorded videos. This value cannot be manually defined. The NVR


will automatically adjust its QLT depending on the RES and PPS that is configured from the user.

**Tip:** Should you wish to apply the same value to the rest of the cameras, you can utilize [Apply to All] option. For example, any settings that you've defined on CH 1 can be applied to cameras 2 ~ 4 by checking [Apply to All] option.



**IMPORTANT:** Should you wish the NVR to record ONLY when the motion is detected, follow these further instructions.

- 5. Uncheck CONTINUOUS Record option to all of the cameras that you wish to record ONLY on motion.
  - Using Mouse: Uncheck CONTINOUS Record on desired cameras.

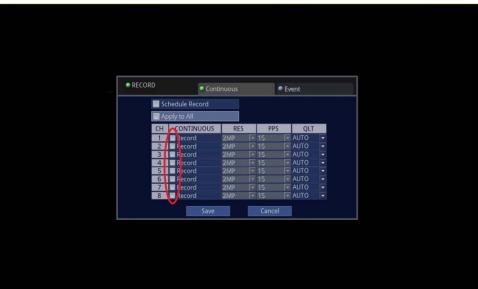


- 6. Click on the [Event] option.
  - Using Mouse: Click on [Event].




6. Check Record under the MOTION. Again, you can use the [Apply to All] shortcut to apply the setting to all cameras.

• Using Mouse: Click on [Record] to activate Motion Recording.

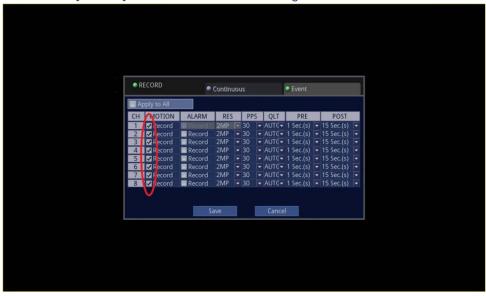


- 7. Save and exit out to the Live screen.
- 8.. Begin recording the video.
  - Using Mouse: Click on the [Record On].

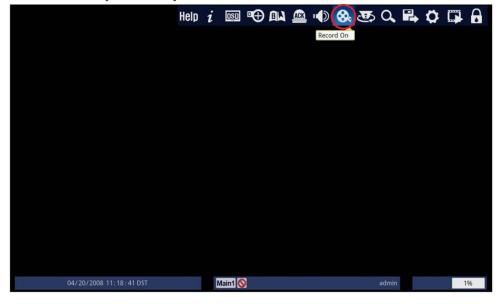


#### HOW TO SETUP IP ADDRESS UNDER THE NETWORK SETUP

The network menu allows for adjustment to the TCP/IP settings for viewing video across a local area network or through the internet.


- 1. Follow the instructions below.
  - Using Mouse: Click on the [Setup Menu] icon.

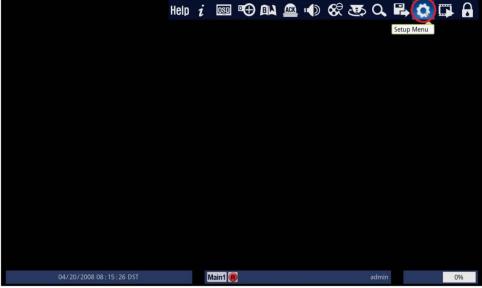

- 2. Select Advanced Setup.
  - Using Mouse: Click on the [Advanced Setup].

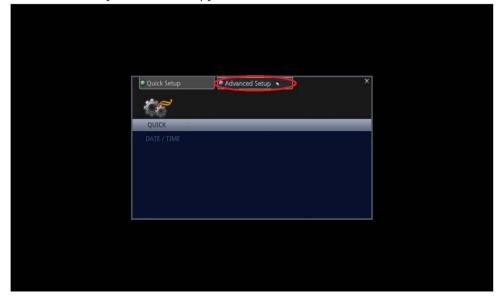


- 3. Select Network and access the sub-menu of NETWORK.
  - Using Mouse: First, click on the [NETWORK] icon, and then click on the [NETWORK] text.

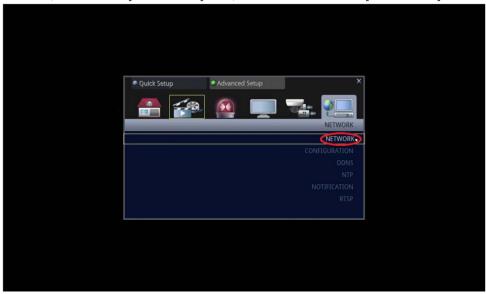

4. Make necessary changes.


**Note**: To change the parameters of IP, Netmask, Gateway, DNS1, DNS2, Port, follow the instructions below. (These parameters are given by your Internet Service Provider or Network Administrator.)

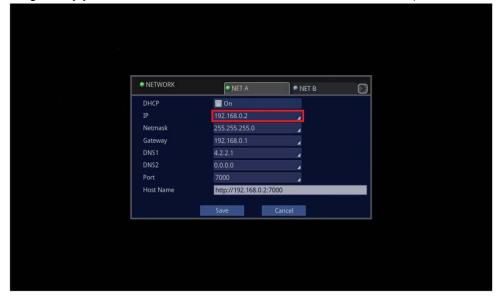

Highlight and click the IP portion on the screen.



Virtual numeric keypad will pop up on the screen. Use your mouse to click on the desired value such as  $0 \sim 9$ , Backspace, Enter and Clear button to enter your values..

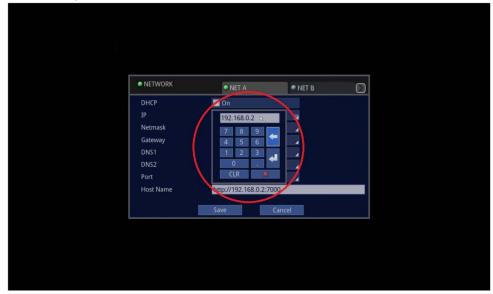



**DHCP**: Obtains IP, Netmask, Gateway, DNS1, DNS2 automatically from your internet device or Router. Only

enable this when you know that DHCP is supported by your network.

IP: IP AddressNetmask: Subnet Mask

**Gateway**: Gateway, usually referred to as IP Address of your router on the network.

**DNS1**: Primary Domain Name Server Address, given by your Internet Service Provider or Network Administrator.

**DNS2**: Secondary Domain Name Server Address, given by your Internet Service Provider or Network

Administrator.

**Port**: 7000 is the factory default. This port number is customizable and can be changed.

Host Name: This is the unique ID of the NVR that communicates to our DDNS server. Type the address that is shown

here to your web browser such as Internet Explorer, Mozilla Firefox, Google Chrome, or Apple Safari.

**Tip 1**: When the NVR is connected and configured to connect to public internet, it will display unique address such as <a href="http://hostname.nuvicoconnect.com:7000">http://hostname.nuvicoconnect.com:7000</a>


**Tip 2**: For example: http://u123432.nuvicoconnect.com:7000 can be typed into any web browser and the user can view/playback the videos from the NVR via the web browser.

6. Save and exit out to the Live screen.


## **VIDEO SEARCH & PLAYBACK**

### HOW TO SEARCH FOR VIDEO USING "TIME SEARCH" METHOD

- 1. Follow the instructions below.
  - Using Mouse: Click on the [Search] icon.

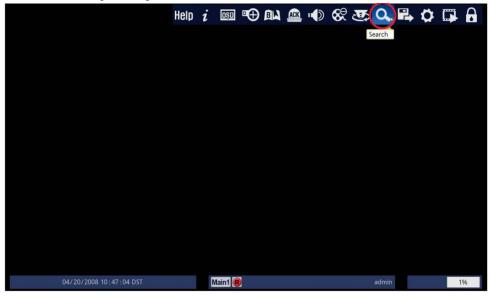


- 2. Select Time Search.
  - Using Mouse: Click on the [Time Search] icon.

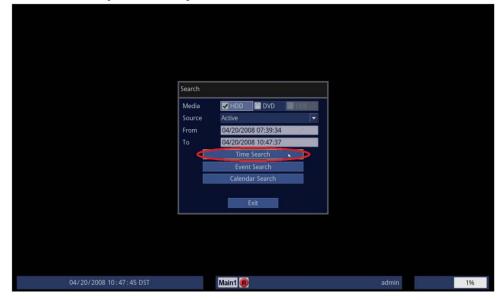

### **VIDEO SEARCH & PLAYBACK**


- 3. Enter your desired Date and Time.
  - Using Mouse: Click on the desired group such as Month/Day/Year/Hour/Minute/Second and click on the [▲] [▼] part of the screen to change the value. Then, highlight and click on [Start]. Your desired video will start playing.

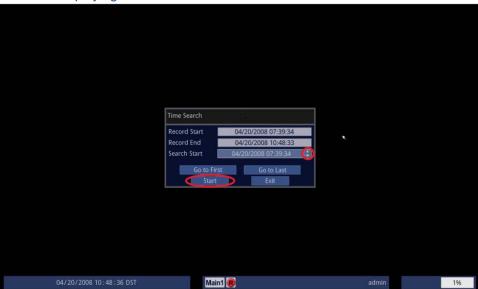


- 4. To exit out to the Live screen.
  - Front Panel/Remote: Press and hold onto **ESC** button for 2 seconds.
  - Using Mouse: Right click on your mouse twice.

### HOW TO SEARCH FOR VIDEO USING "CALENDAR SEARCH" METHOD

- 1. Follow the instructions below.
  - Using Mouse: Click on the [Search] icon.

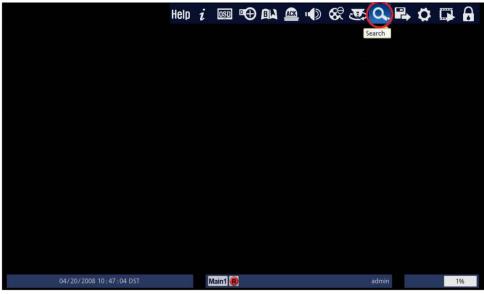

- 2. Select Calendar Search.
  - Using Mouse: Click on the [Calendar Search] icon.

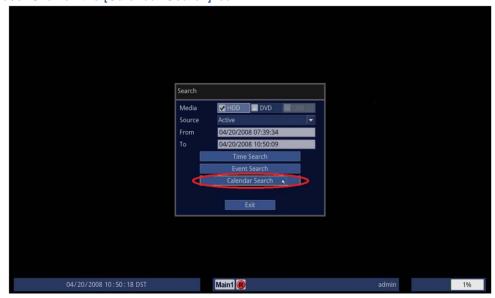

## **VIDEO SEARCH & PLAYBACK**

3. Select Year, then Month, and Finally the day of the month.

• Using Mouse: Click on either the Year/Date or Day and change to the desired value.



- 4. Select your desired time of the day.
  - Using Mouse: Click on the desired time of the day. Your desired video will start playing.




# **VIDEO SEARCH & PLAYBACK**

- 5. To exit out to the Live screen.
  - Using Mouse: Click on the X (Close).




# HOW TO COPY VIDEOS INTO CD/DVD/USB

- 1. Follow the instructions below.
  - Using Mouse: Click on the [Copy] icon.

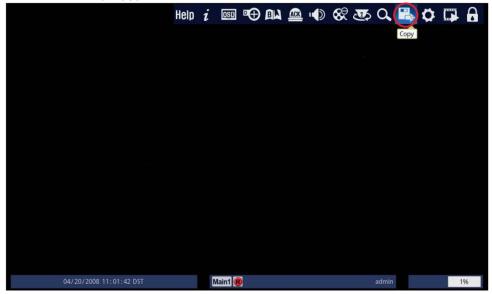

#### HOW TO COPY VIDEOS INTO CD/DVD/USB

- 2. Set your desired video copy parameters.
  - Using Mouse: Click on the different parameters and click to change the value. Values below can be changed.

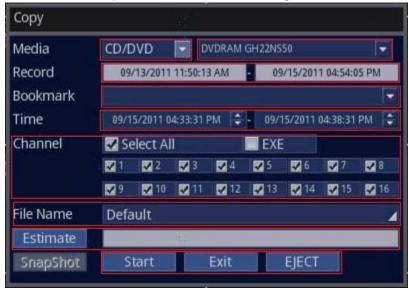

Media: CD/DVD or USB or USB(MP4). USB(MP4) is a industry standardized video file where it can be played in

Quick Time or VLC Player. Also, since there can be more than one similar devices connected to the NVR,

you can also choose which device to use, which is located on the right side of media selection.

**Record:** Informational purpose only. This section displays the earliest recording date/time to the latest

recording time that are present on the NVR.

Bookmark: During playback of video, user could have bookmarked certain section. If it was bookmarked, the lists will

show up here.

**Time**: Enter your desired start and the end time of your video to be copied.

**Channel**: By factory default, "Select All" is checked, therefore, all the channels or cameras will be copied. However,

should you want to copy only the specific cameras, you can unselect "Select All" and check only the

cameras that you desire to be copied.

**NOTE**: When "EXE" is checked, NVR will make self executable file where it can be played on any PC without the need of installing NUVICO player software to view the file. Extremely useful if you want to give the copied video to law enforcement and etc.

File Name: By factory default, the file name will be start date/time of the video. Should you want to customize the file

name, you can enter it here.

**Estimate**: If you are unsure about the file size outcome, you can click on "Estimate" and the NVR will estimate the

total size of the copied file for you.


**Start/Exit/EJECT**: When all the values are entered, you can either Start the copying process, Exit the copying process. If you doing CD/DVD copying, you can choose "EJECT" to open the tray to insert blank media.

IMPORTANT NOTE: CD-R or DVD-R mediums only. No RW or + of any kind.

- 3. To exit out to the Live screen.
  - Using Mouse: Right click on your mouse twice.


## **HOW TO VIEW COPIED VIDEO**

- 1. Insert the copied medium such CD/DVD or USB Thumbdrive into the NVR.
- 2. Follow the instructions below.
  - Using Mouse: Click on the [Search] icon.

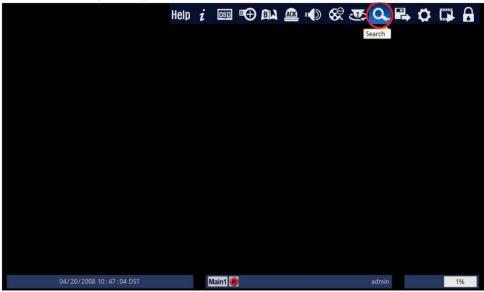


- 3. Choose your desired medium such as DVD or USB.
  - Using Mouse: Click on either DVD or USB.



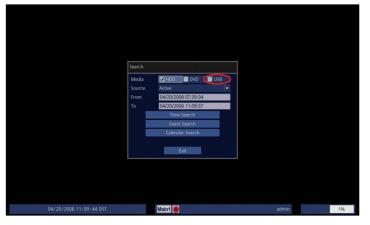


## **HOW TO VIEW COPIED VIDEO**

4.NVR will search for video from your desired medium.

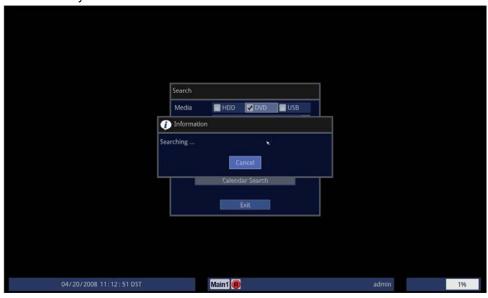

5. NVR will display videos that are available on your desired medium.

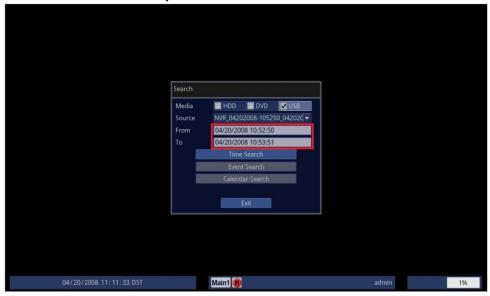

6. Follow Time Search method that is explained on pages above.





# **NUVICO®**

NUVICO ® Copyright 2012 Version 2.08 Designs and specifications are subject to change without notice. For more information, please visit our website at www.nuvico.com

#### **NUVICO Corporate Headquarters**

53 Smith Street Englewood, NJ 07631
Tel: 201-541-1605 Toll Free: 866-523-1700 Fax: 201-541-1620 sales@nuvico.com | www.nuvico.com

#### **NUVICO International Corporation**

R#1001, KOFOMO Tower, 16-3 Sunae-Dong, Bundang-Gu, Seongnam-Si Gyeonggi-Do, 463-825, Korea Tel: 82-31-712-8814 Fax: 82-70-7500-9164 | export@nuvico.com

Follow us by going to www.twitter.com/nuvico for our latest company news or sign up to receive our eNewsletters by emailing us at: newsletters@nuvico.com

IMPORTANT: NUVICO products are available through authorized resellers only! For more information on our Unauthorized Reseller policy, please visit us online at www.nuvico.com/unauthorized-resellers.htm.